

# Instruction Sheet

## Agitators / Suction Tubing Shield

### 10590 - 10592 Agitators / 25290 - 25292 Agitators / 10458 and 10458-1 Suction Tubing Shield


#### Specifications:

Model	Shaft	Impeller	Volts	Amps	Watts	H.P.
10590	34" S.S.*	303 S.S.*	115 AC 50/60 Hz	1.5	175	1/20
10592	34" S.S.	Neoprene w/Bronze Hub	115 AC 50/60 Hz	1.5	175	1/20
25290	34" S.S.*	303 S.S.*	220-240/50 Hz/DIN Plug	0.75	175	1/20
25292	34" S.S.	Neoprene w/Bronze Hub	220-240/50 Hz/DIN Plug	0.75	175	1/20

\* Shaft and Impeller have corrosion resistant FDA approved black, epoxy coating.

#### Mounting the Agitator:

- With the pump mount indentation on the fiberglass tank cover facing toward (or close to) you, insert the Agitator through the right hand hole in the tank cover. On stainless steel impeller models, tilt Agitator when inserting through the hole.
- Making certain that the Agitator shaft is tilted toward the center of the tank, drill four 1/4" diameter holes if necessary, fasten the Agitator to the tank cover by means of the supplied (4) 10-24 nuts, bolts and washers, with washers inside cover.

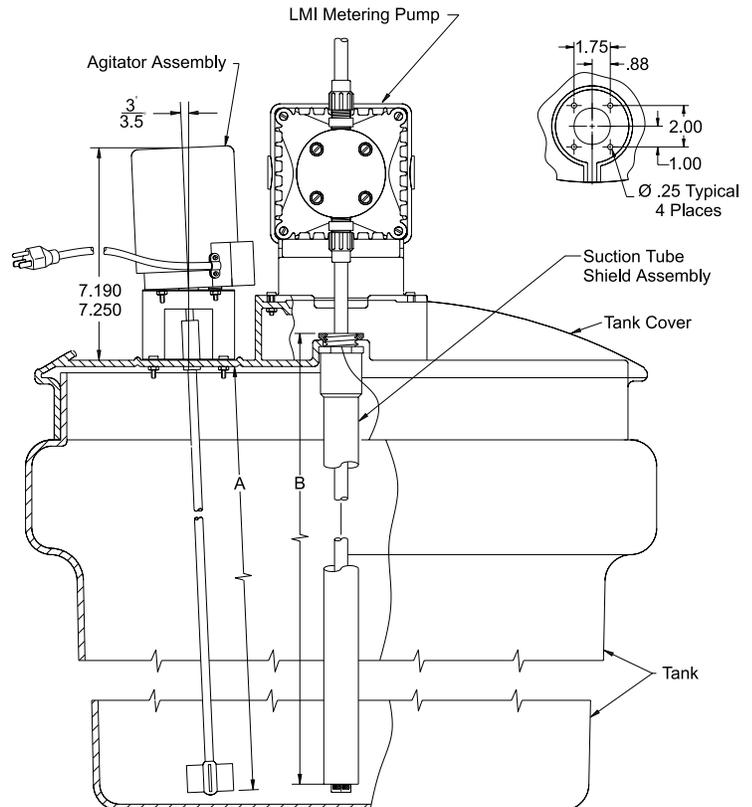

Agitator Assembly	A	
	Dimensions (Inches)	
10590, 10592	33.860	33.920
25290, 25292		

Suction Tube Shield Assembly	B	
	Dimensions (Inches)	
10458	39.0	39.5
10458-1	18.562	19.062

See reverse for installation of suction tube shield.



8 Post Office Square  
Acton, MA 01720 USA  
TEL: (978) 263-9800  
FAX: (978) 264-9172  
<http://www.lmipumps.com>



Replaces same of Rev. H 10/97  
1052. I 12/99

## 27591-34504 Agitators / Suction Tubing Shield Not Required

### Specifications:

Model	Shaft	Impeller	Volts	Amps	Watts	H.P.
27591	27" S.S.*	303 S.S.*	115 AC 50/60 Hz	1.5	175	1/20
34504	27" S.S.*	303 S.S.*	220-240/50 Hz/DIN Plug	0.75	175	1/20

\* Shaft and Impeller have corrosion resistant FDA approved black, epoxy coating.

### Mounting the Agitator:

- Insert the Agitator through the hole on the opposite side of the tank from the pump.
- Drill four 1/4" diameter holes and fasten the Agitator to the tank by means of the supplied (4) 10-24 nuts and bolts. It will be necessary to reach in through the center fill hole to hold the nuts in position.

## 10458 and 10458-1 Suction Tubing Shield Installation

**Suction Tubing Protection** - To keep the suction tubing from wrapping around the agitator shaft, install suction tube shield assembly.

- Insert the threaded end of the PVC tubing shield into the 1 3/8" hole in front of pump mounting recess in tank cover.
- Thread the 1" NPT nut onto the top portion of the PVC tubing shield extending through the tank top.
- Insert suction tubing through the PVC tubing shield.



**CAUTION:**  
THE END OF THE SUCTION TUBING SHOULD NEVER EXTEND BEYOND  
THE BOTTOM OF THE PVC TUBING SHIELD.



- Place cover on tank, mount pump and cut the suction tubing to correct length, making certain that the end of the suction tubing does not extend beyond the bottom of the PVC tubing shield. There should not be sharp bends in the suction tubing which would restrict the suction flow.

### Model 10458 (39") or 10458-1 (19") Suction tube Shield Assembly

