EXTENDED SERVICE LIFE! "J" MODEL INLET STABILIZER

Improved liquid flow to the inlet side of any pump extends the service life of all inlet system components.



USE AN INLET STABILIZER TO:

- Ensure complete chamber fill, extending component service life
- Protect pumps, valves, diaphragms, and pistons from excess stress and strain
- Protect inlet components from vibration and fatigue
- Ensure accuracy of inlet side gauges
- Prevent premature system component failure
- Prevent cavitation
- Prevent gauge damage due to vibration
- Extend diaphragm life in all diaphragm pumps

Patent #6,089,837 Protect Your Entire System!

"J" MODEL FEATURES:

- Improved inlet flow conditions
- Patented control unit allows you to adjust for pressure or vacuum settings
- Regulates for suction lift or positive inlet pump conditions
- Available in 10 cu in (.16L) to 10 gallon (37.85L) sizes
- All standard models available from stock
- Bodies available in a full range of chemically resistant materials

(800) 603-7867 www.Blacoh.com














WHY USE AN INLET STABILIZER?

Positive displacement (PD) pumps contain an inlet valve that alternately opens and closes, creating an acceleration and deceleration of fluid into the pump. Depending on process fluid characteristics and pipe arrangement, there will either be a scarcity or abundance of pressure and/or flow at the pump's inlet. The "J" Model Inlet Stabilizer effectively works to minimize these pressure fluctuations and acceleration head losses by preventing fluid column separation at the pump's inlet.

HIGH INLET PRESSURE (Positive Inlet)

Under high inlet pressure, liquid flow is abruptly stopped as the inlet valve closes. This rapid deceleration creates a pressure spike or "water hammer", with pressures increased by a factor up to five. With higher differential pressures in which inlet valves close even faster, these pressure spikes are further increased. Constant repetition puts significant strain on the system, and may result in system fatique or failure.

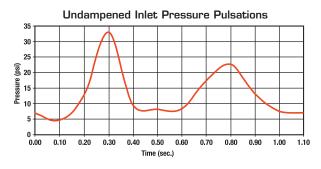


LOW INLET PRESSURE (Suction Lift)

Pressure (psi)

-8

-10

 Under low inlet pressure, process fluid separates at the pump's inlet as the inlet valve closes. Depending on system design, low inlet pressure (NPSH available) may not be enough to meet required inlet pressure (NPSH required). For example, undersized pipes or pipes too lengthy for the viscosity or vapor pressure of the liquid can result in product starvation or "cavitation". Cavitation occurs when pressure in the pump's inlet drops below the vapor pressure of the liquid being pumped. This causes severe damage to




0,00 0,10 0,20 0,30 0,40 0,50 0.60 0,70 0,80 0,90 Time (sec.)

HOW THE "J" MODEL INLET STABILIZER WORKS

Air-operated diaphragm pumps are particularly susceptible to this phenomenon. As one AODD inlet valve closes, the inlet valve in the opposite chamber opens. The resultant pressure spike travels into the liquid chamber and slams against the diaphragm, stretching and weakening this crucial component.


The "J" Model Inlet Stabilizer effectively cushions and absorbs such pressure spikes, increasing overall system life and productivity.

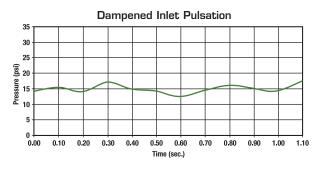

the pump's suction end components, severe pitting on pistons and plungers, and drastically reduces diaphragm life.

Multiple head pumps are particularly predisposed to fluid starvation, as each fluid chamber pulls product through inlet runners of unequal lengths.

The "J" Model Inlet Stabilizer effectively reduces liquid starvation or "cavitation" by acting as a storage accumulator. As such, when the inlet valve opens on the discharge stroke, the "J" Model puts fluid back into the line, maintaining inlet pressure and constant flow.

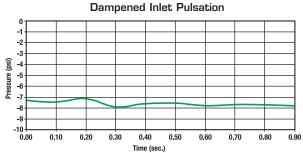

The "J" Model's control unit consists of a compound pressure gauge, a vacuum tight ball valve, and a venturi valve. Compressed air passed through the venturi valve at high speed creates a low pressure area. This evacuates air from the stabilizer and creates an internal vacuum. Conversely, when the flow of air through the venturi valve is diverted into the stabilizer, a pressure charge is obtained, optimizing pump efficiency and productivity.

Please call your local distributor:	Call for your FREE
	Demonstration CD
	6
	Tel: (800) 603
	E-
L-211 3/04	



601 Columbia Ave., Bldg. D, Riverside, CA 92507 • USA (800) 603-7867 or (951) 342-3100 • Fax: (951) 342-3101 E-mail: sales@blacoh.com • Website: www.blacoh.com