

# Liquid End Sheet

## LE-151, LE-151U, LE-152, LE-152U

When pumping solutions, make certain that all tubing is securely attached to the fittings. It is recommended that tubing or pipe lines be shielded to prevent possible injury in case of rupture or accidental damage. Always wear protective clothing and face shield when working on or near your metering pump.

**Note:** See parts list for materials of construction

### A. INSTALLING INJECTION CHECK VALVE

1. The purpose of the injection check valve is to prevent backflow from the treated line.
2. A 1/2" NPT female fitting with sufficient depth will accept the injection check valve.
3. To insure correct seating of the ball inside the injection check valve, the injection check valve should be installed upwards (vertically) into bottom of the pipe.

### B. CONNECTING DISCHARGE TUBING

#### NOTE:

Cut tubing to length needed for discharge line.

1. Route tubing from the injection check valve to the metering pump, making sure it does not touch hot or sharp surfaces, or is bent so sharply that it kinks.
2. Slide the small end of the coupling nut onto tubing.
3. Slide the long, straight end of the ferrule onto tubing such that tubing exits at the cone shaped end of the ferrule.
4. Insert tubing into the valve housing so that tubing butts up against valve housing and will not go any further.
5. Slide ferrule down so that the cone shaped end fits snugly into valve housing.
6. Slide the coupling nut to the threads and engage. While pushing the tubing into valve housing, tighten the coupling nut by hand until tubing is held securely in place.

**Excessive force will crack or distort fittings.  
DO NOT USE PIPE WRENCH.**

### C. CONNECTING SUCTION TUBING

1. Cut suction tubing to a length so that the foot valve hangs just above the bottom of the solution container. Maximum recommended vertical suction lift is 5 ft (1.5 m).
2. Follow same procedure in connecting suction tubing to suction valve and foot valve (see B. Connecting Discharge Tubing).

### D. PRIMING

1. Temporarily remove tubing from the injection check valve and hold the end of tubing so it is above the level of the pump.
2. Start pump. Set at 80% speed and 100% stroke.
3. As soon as solution is visible through translucent discharge tubing, just past the discharge valve, stop the pump.
4. The pump is now primed.
5. Reconnect tubing to the injection check valve.

#### Note:

- (a) Pump is normally self-priming if suction lift is not more than 5 ft (1.5 m), valves in the pump are wet with water (pump is shipped from factory with water in pump head) and the above steps (D. Priming) are followed.
- (b) If the pump does not self prime, remove discharge valve housing and ball and pour water or solution slowly into discharge port until head is filled. Follow step D. Priming thereafter.



8 Post Office Square  
Acton, MA 01720 USA  
TEL: (508) 263-9800  
FAX: (508) 264-9172  
<http://www.lmipumps.com>



Replaces same of H 5/95  
1395. H 2/97

THIS SHEET LISTS PARTS FOR FOUR DIFFERENT LIQUID HANDLING ASSEMBLIES. BE SURE YOU ARE USING THE CORRECT PARTS LIST FOR YOUR PUMP. THE LIQUID HANDLING ASSEMBLY NUMBER IS THE LAST THREE DIGITS OF YOUR PUMP MODEL NUMBER.

KEY NO.	PART NO.	DESCRIPTION	QUANTITY			
			LE-151	LE-151U	LE-152	LE-152U
1	27352	Flapper Valve	1	1	1	1
2	10394	Injector Fitting, Polypropylene	1	1		
	26841	Injector Fitting, PVDF			1	1
3	10339*	Spring, PVDF	1	1	1	1
4	10338*	Ball, Ceramic, .375	4	4	4	4
5	29443*	Seal Ring, Polyprel	4	4	4	4
6	28664	Valve Seat, GFR PP .250	2	2		
	28882	Valve Seat, PVDF .250			2	2
8	10299	Coupling Nut	4	4	4	4
9	25636-16	Tubing, .250" O.D. Polyethylene	1		1	
	28636-16	Tubing, .250" O.D. U.V. Resistant PE		1		1
10	29608	Head, 0.5 SI GFR Polypropylene	1	1		
	29609	Head, 0.5 SI PVDF			1	1
11	10340	Screw, 10-24 x 3/4" SS	4	4	4	4
12	30916*	Liquifram, 0.5 SI Fluorofilm	1	1	1	1
14	28665	Valve Housing, GFR PP .250	1	1		
	28883	Valve Housing, PVDF .250			1	1
15	10978	Foot Valve Seat	1	1	1	1
16	10123	Strainer, Polypropylene	1	1	1	1
17	28001	Inj. Check/Back Pressure Valve Asm	1	1		
	28037	Inj. Check/Back Pressure Valve Asm			1	1
18	28005	Discharge Valve Asm	1	1		
	28041	Discharge Valve Asm			1	1
19	28004	Suction Valve Asm	1	1		
	28040	Suction Valve Asm			1	1
20	28002	Foot Valve Asm	1	1		
	28038	Foot Valve Asm			1	1
21	28068	Head Asm, LE-151	1	1		
	28074	Head Asm, LE-152			1	1
NS	32293	Tubing Straightner Asm.	1	1	1	1
30	28663	Ferrule	4	4	4	4


\* Parts included in Spare Parts Kit SP-U8

**NOTE:**

Threaded connections into pump head are 3/4" - 16 straight threads.

**Do not use Teflon tape.**

These joints are sealed by seal ring valve seats (item 5 on exploded view).

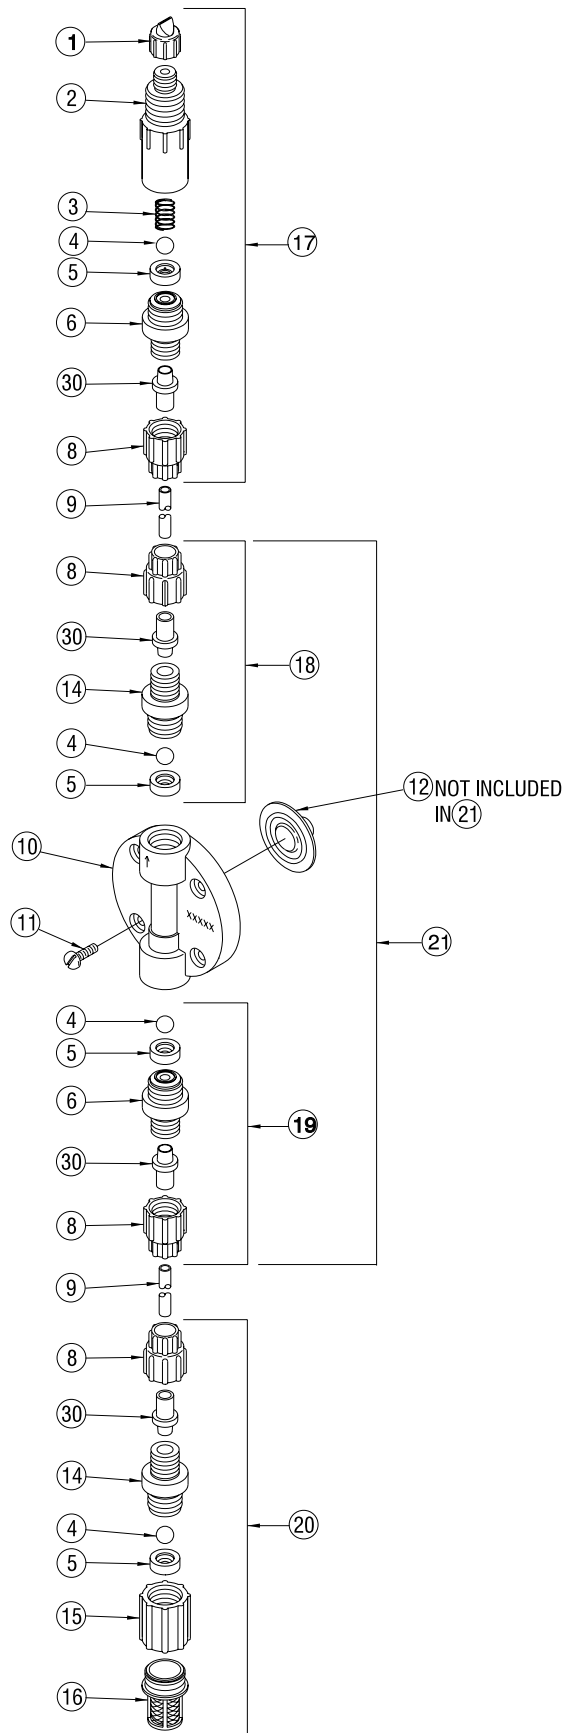



8 Post Office Square  
Acton, MA 01720 USA  
TEL: (508) 263-9800  
FAX: (508) 264-9172  
<http://www.lmipumps.com>